Instruction Manual

MegaLED e2000





CONTROL PANEL



- 1) Dimmer Knob : Manual adjust Dim levels to 10%~100%
- 2) Power Switch : Toggle switch
- **3) AC Inlet** : With the products supplied AC cord is universal input from 100~240VAC 50/60Hz.

OPERATING

1) Power ON

Push the ②power button to turn on the light according to the position of the ①dimmer knob..

2) Dimming

Dim level can be fine tuned with the adjustment Dimmer knob to setting between 10%~100%.

INSERTING BARNDOOR DOORS

- 1) Adjust the thumbscrew and slide bar. Position the barn-door alongside the extruded edge of fixture. After adjust slide bar and thumbscrew.
- 2) In addition, it is possible to remove of Diffuser, Louver.

WARNING & TROUBLE SHOOTING

- 1) Always turn off the light before connecting or disconnecting AC Cable.
- 2) Do not operate on SCR dimmers.
- 3) With the power switch in the ON position, the light should be on. If it is not, voltage is not present. Check your power feed. Check the fuse in AC Inlet on the back of the fixture and replace if necessary (51NR 250V 3A).